


Medallion Brand Bagger Stereo System®

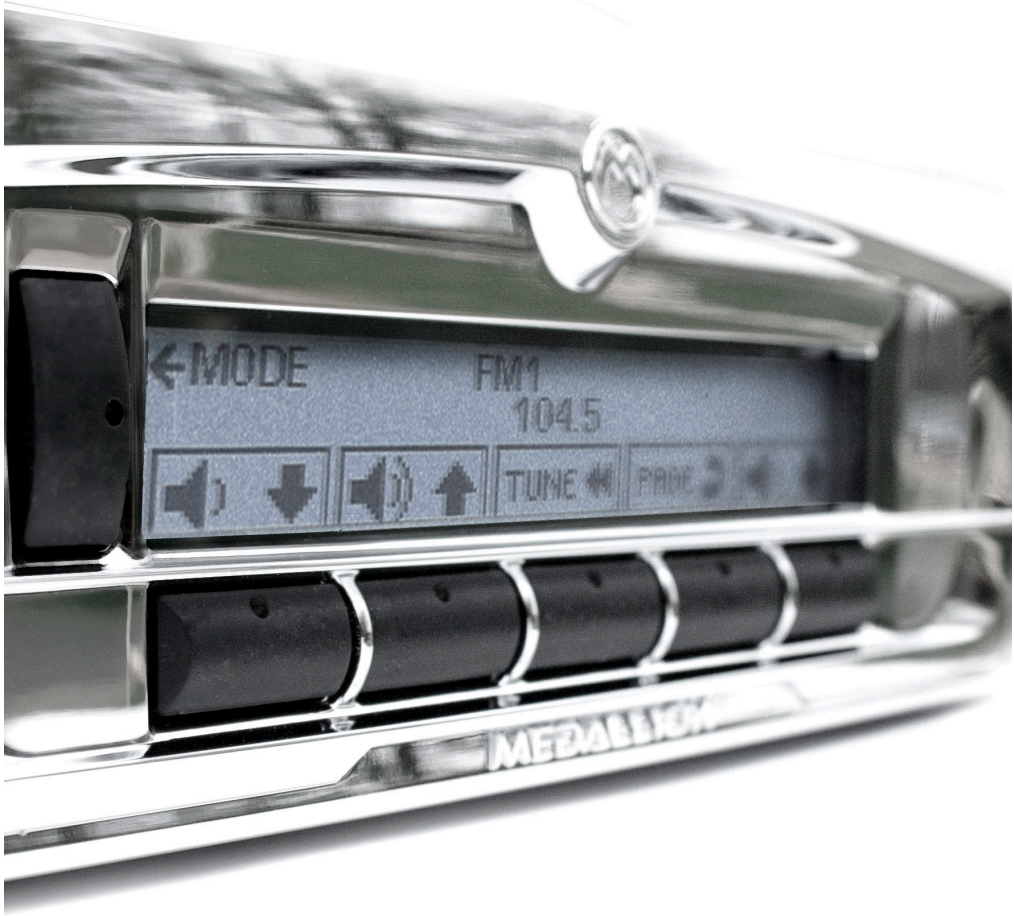



The guide for the replacement of a factory stock radio. Installation may vary if stock radio has been replaced.

Included in Kit:

- Handle-Bar Control Module [HCM]
- Radio Control Module [RCM]
- Radio Handle-Bar Control Harness
- Interface Harness
- Radio Antenna
- Radio Connections
- iPod Cable
- Radio
- Bracket
- Mux Switch
- USB Cable
- Supportive Speaker Wires
- USB Cable
- Sirius Connector
- Display Connectors
- Black Faceplate
- Chrome Faceplate

Most of the assembly has been done at our factory in order to make the installation go as smoothly as possible. Kit does not include a radio antenna. Depending on the type of connector on the end of your stock antenna, a replacement antenna or adapter might be needed. Refer to stock radio manual for further information and instructions for connecting optional equipment such as an audio amplifier, Sirius Satellite Radio, or speakers. The Green and Purple wires on the Medallion wire harness are for optional speakers. This kit is Sirius Satellite Radio “ready”. Sirius equipment is not included.

The (4) screws used to fasten the stock radio will be used to fasten the Medallion Stereo. If you need to replace them, use 1/4”-20 x 3/4” long SHCS (Socket Head Cap Screws) with a flat washer and lock washer. A longer screw will damage the radio unit.

Common tools and supplies needed:

- T27 Torx® driver
- #2 Phillips screwdriver
- 5/16” nut driver
- 1” open-end wrench
- Hex wrench set
- Wire cutters
- Wire crimpers
- Wire ties
- Electrician’s tape

Step 1:

Remove the inner fairing screws.

TIP: Sometimes these are hard to find. FLT Road Glide® inner fairings have (8), FLH Street Glide® inner fairings have (7).

Protect the fender & tank with a cover before you begin disassembly to avoid accidental damage!




Step 2:

TIP: This is where having a second person to hold the outer fairing would be helpful.


On FLH fairings, loosen the (3) windscreen screws and only remove the two outer screws. Leave the middle screw in place but loose. Remove the windscreen by wiggling gently and set it aside. Hang onto the outer fairings while removing the middle screw and trim. Unplug the headlamp connector [2a] and set the fairing aside.

On Road Glide FLT type fairings the windscreen doesn't need to be removed to disassemble the fairing, but it will be easier to reassemble the fairing without it. It can also prevent damaging the black decal on the windscreen during reassembly. Begin by removing the turn signals from each side of the fairing. Lift the outer fairing off the inner and disconnect the headlight [2a] and set the outer fairing aside.

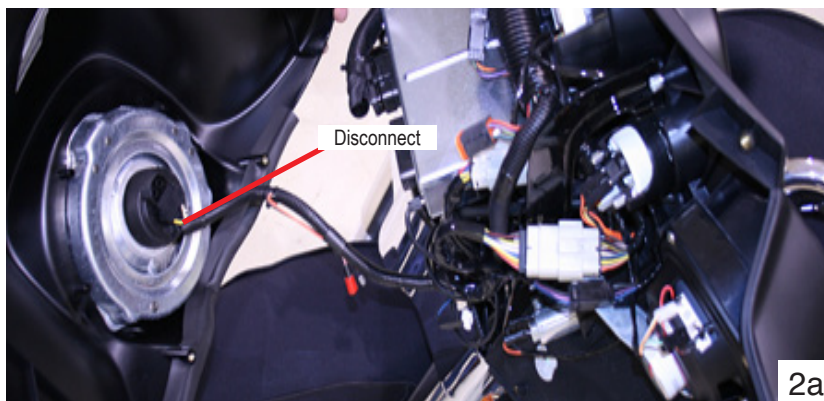

Step 3:

Disconnect and remove the stock radio while remembering to keep the four screws.

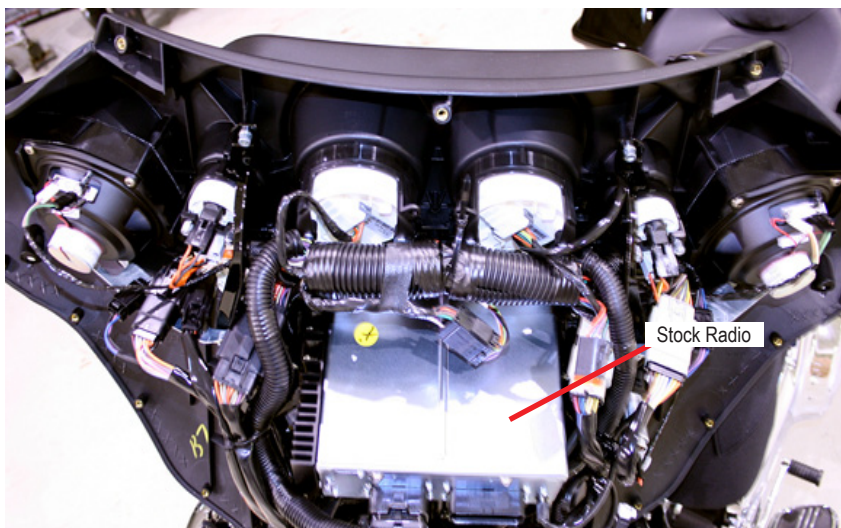

Step 4:

Position the assembly into the fairing and secure it into position using the (4) ¼-20 screws that held the stock radio in place

Step 5:

Choose from the Chrome or Black Medallion faceplates included in the kit. Place the top edge of the faceplate onto the top edge of the switch module and align the holes in the faceplate with the buttons, then apply pressure the lower edge of the faceplate to snap it onto the lower edge of the switch module. If you wish to change the faceplate, carefully use a Flathead to pry between the space of the faceplate and the switch module.

**Step 6:**

Connect the large black electrical plug disconnected from the rear of the stock radio and connect it to the mating black connector on the Medallion harness.

Step 7:

Use wire ties to secure and dress the Medallion modules and harnesses as you wish.

Step 8:

Power up the unit and test functionality.

Step 9:

Reassemble the outer fairing.

Step 10:

Refer to the following pages of this guide for use and operation of the Medallion Bagger Stereo System.

TUNER MODE


LEFT HANDLEBAR



HANDLEBAR CONTROLS

(Shown in RED text)

RIGHT HANDLEBAR

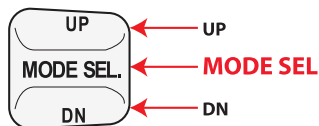

FIRST MENU PAGE

←MODE TUNER		FM1 87.5			
POWER	SELECT	AUTO VOLUME	PAGE ↻	BACK	

Power ON/OFF.
With ignition on,
power on by
holding **MODE
SEL.**

Hold **AUDIO** in to
toggle between
bass/treble, etc.
AUDIO UP/DN to
adjust value.

TO AUTO
VOLUME PAGE

TO SECOND
MENU PAGE

BACK TO
PREVIOUS
RADIO PAGE



SECOND MENU PAGE

←MODE TUNER		FM1 87.5			
RESET	DISPLAY	CLOCK ADJUST	PAGE ↻	BACK	

RESETS THE
RADIO

CHANGE
RADIO
INFO

ADJUST
THE CLOCK

TO FIRST
MENU
PAGE

BACK TO
PREVIOUS
RADIO PAGE

AUTO VOLUME

←MODE TUNER		FM1 87.5			
OFF	1	2	3	BACK	

RESETS THE
RADIO

CHANGE
RADIO
INFO

ADJUST
THE CLOCK

TO FIRST
MENU
PAGE

BACK TO
PREVIOUS
RADIO PAGE

CLOCK SET

←MODE TUNER		AM 00 102			
CLOCK ADJUST	UP	DOWN	DISPLAY	BACK	

With clock showing in the display press the CLOCK ADJUST button to toggle between hours and minutes. Use the UP/DOWN buttons to adjust clock. To switch AM/PM, hours may be advanced or backed up 12 Hours.

TUNER MODE


LEFT HANDLEBAR




HANDLEBAR CONTROLS

(Shown in RED text)

RIGHT HANDLEBAR

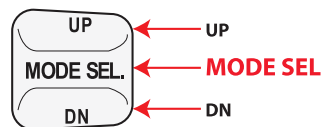

FM & AM

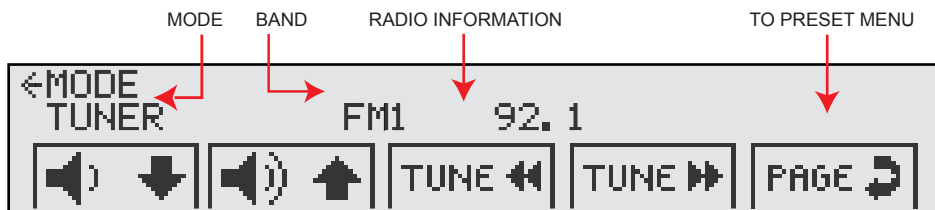



Volume **DN** with **AUDIO**. Press **DN** to decrease.

Volume **UP** with **AUDIO**. Press **UP** to increase.

Station **DN** with **MODE SEL.**. Press **DN**/release to step **DN** one station. Press **DN**/hold for preset stations.

Station **UP** with **MODE SEL.**. Press **UP**/release to step **UP** one station. Press **UP**/hold for preset stations.

 NEXT PAGE

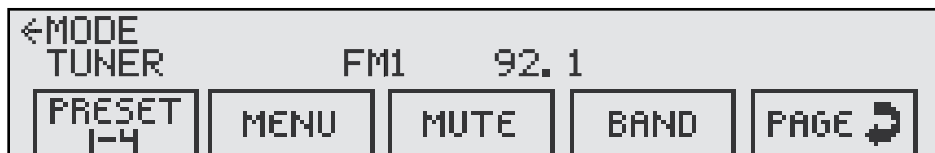

ENTER PRESET MENU

SETUP MENU


Press and release **AUDIO** to mute. Press and release again to turn mute off.

Band select. depress and hold **MODE SEL** to switch band: FM1; FM2; FM3; AM1; AM2.

RETURN TO MAIN PAGE



PRESET MENU

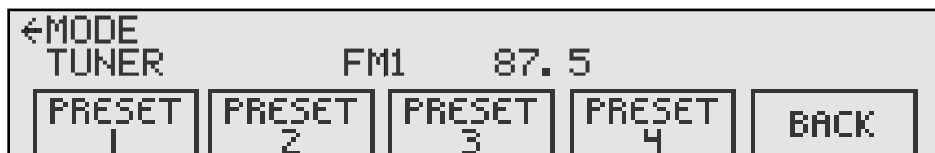

AFTER TUNING TO A DESIRED STATION PRESS AND HOLD ONE OF THE 4 PRESET BUTTONS FOR 2 SECONDS OR UNTIL THE DISPLAY INDICATES IT HAS COMPLETED THE SAVE.

RETURNS BACK TO THE TWO MAIN MENUS

IPOD MODE


LEFT HANDLEBAR



HANDLEBAR CONTROLS

(Shown in RED text)

RIGHT HANDLEBAR

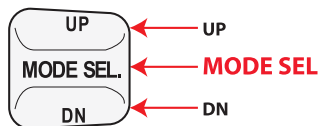


Volume **DN** with **AUDIO**. Press **DN** to decrease.

Volume **UP** with **AUDIO**. Press **UP** to increase.

Track **DN** with **MODE SEL**. Press **DN**/release to step **DN** one track.

Track **UP** with **MODE SEL**. Press **UP**/release to step **UP** one track.

 NEXT PAGE



PLAY/PAUSE

SETUP MENU

Press and release **AUDIO** to mute. Press and release again to turn mute off.

RANDOM SONGS

NEXT PAGE



Press and hold **MODE SEL** to select folders.

 
- Playlist
- Genre
- Artist
- Songs
- Album

Push **MODE SEL UP** to scroll folder **UP**.

Push **MODE SEL DN** to scroll folder **DN**.

Press and hold **AUDIO** to select.


NEXT PAGE



Press and hold the **MODE SEL** to enter the iPod music **FOLDER SELECT** mode. Push the **MODE SEL UP** and **DOWN** to change between Playlist, Artist, Album, Genre and Songs, then press and hold **AUDIO** to accept selection. Use the same method to select the rest of the playlist information. If the folder select times out, you will need to press and hold the **MODE SEL** again.

USB MODE


 
LEFT HANDLEBAR



HANDLEBAR CONTROLS

(Shown in RED text)

RIGHT HANDLEBAR

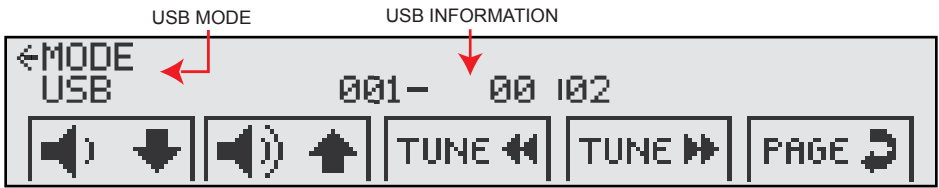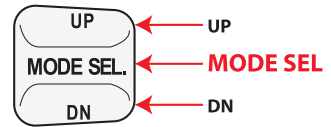


Volume **DN** with **AUDIO**. Press **DN** to decrease.



Volume **UP** with **AUDIO**. Press **UP** to increase.



 Track **DN** with **MODE SEL.** Press **DN**/release to step **DN** one track.



Track **UP** with **MODE SEL.** Press **UP**/release to step **UP** one track.



NEXT PAGE



PLAY/PAUSE

SETUP
MENU

Press and release **AUDIO** to mute. Press and release again to turn mute off.



RANDOM
PLAY

NEXT PAGE



Press and hold **MODE SEL.** to select folder.



Push **MODE SEL UP** to scroll folder **UP**.



Push **MODE SEL DN** to scroll folder **DN**.



Press and hold **AUDIO** to select.



NEXT PAGE

After pressing and holding **MODE SEL** to enter FOLDER SELECT mode, you must press and hold **AUDIO** to confirm the FOLDER SELECT mode. After **AUDIO** is pressed and held, you will see the first FOLDER on the USB. Push **AUDIO UP/DOWN** until the desired folder is displayed. Press and hold **AUDIO** to select the folder. Repeat steps to select a song in the folder.



Volume **DN** with **AUDIO**. Press **DN** to decrease.

Volume **UP** with **AUDIO**. Press **UP** to increase.

Press and release **AUDIO** to mute. Press and release again to turn mute off.

MENU



TECH SUPPORT

800.828.8127
techsupport@medallionis.com

6800-09507-01E

Visit our website



medallionmotorcyclegauges.com

© 2012 Medallion Instrumentation Systems LLC, Spring Lake Michigan, USA
Harley-Davidson®, Street Glide®, and Road Glide® are registered trademarks of
Harley-Davidson Motor Company, Milwaukee, Wisconsin, USA
iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.
SIRIUS and the SIRIUS dog logo are registered trademarks of SIRIUS Satellite Radio, Inc.